


BYPASSING FUNCTION

The Superbox has two options in order to get the system into bypass mode.



Option 1 - Bypassing the system, using the contactor relays, will allow you to select individual dispense point(s) needed to be bypassed. (You can find the contactors mounted inside the unit or often mounted in a separate Electrical box). Flip the red switch from Auto to Closed (as shown) and the dispense point/pump should be ready to be used in by pass mode.

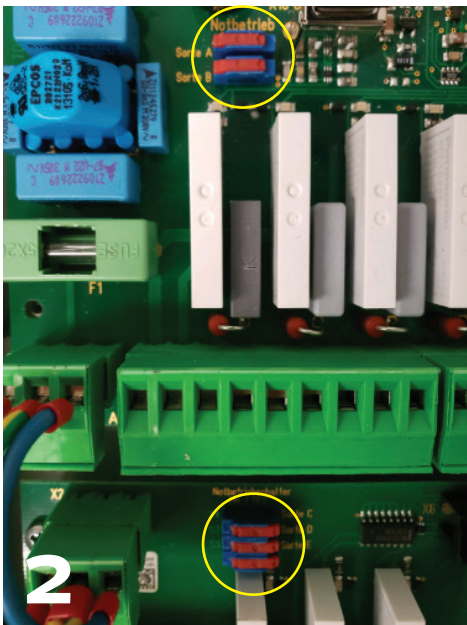

Option 2 - Bypassing the system at the board. Inside the metal casing of the Superbox (Access granted with key to the unit). You will remove the 6 screws on the faceplate to access the main boards. You will see 5 red/blue dip switches labeled “Sorte A” - “Sorte B” (circled on the left) . When the dip switches are moved to the right, they sit in standard operation. When moved to the left, they are in bypass mode. You can choose which dispense point(s) you would like to put into bypass mode.

Note: Transactions will not be recorded by the Superbox while in bypass mode.