Setting Contingents in MyTecalemit Cloud

The MyTecalemit Cloud system allows users to limit their vehicles' fuel usage by product. This can be used to either lock the vehicle out of certain products or to limit a vehicle's fuel usage over a specified time period.

How Contingents Function

- Contingents are added by specifying a fueling limit in gallons along with a window in days to apply the limit for.
- Contingents apply in a rolling window. If you set a 7-day time window for the contingent, the contingent will deduct and fuelings in the last 7 days from the set limit. ***Note*** *Contingents account for historical usage when added, meaning that fuelings performed before a contingent was enabled will still deduct from your set limit.*
- Contingents are set per-product. If you only wish to set a contingent for one product type, all other contingents can be left blank.

Before You Start

Confirm that you have your Wonderbox or Superbox set up correctly. This includes the Delivery Point settings under Inventory Data -> Fuel Terminals as well as the product names under Inventory Data -> Products/Prices.

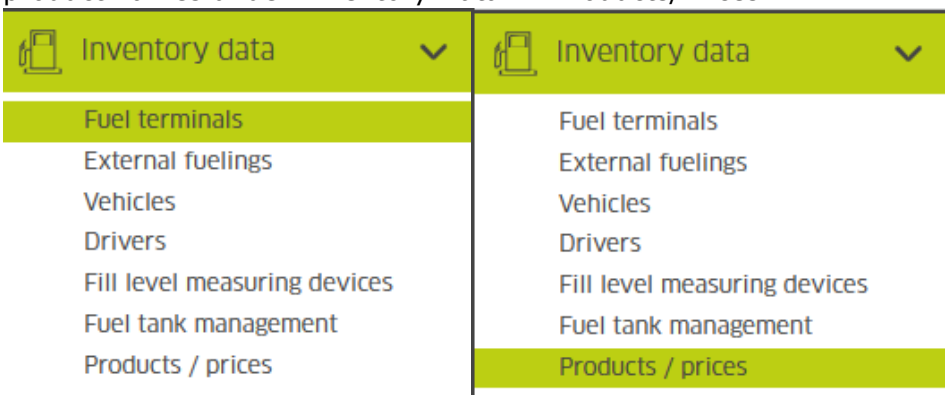

Figure 1: Fuel Terminal and Product Tabs

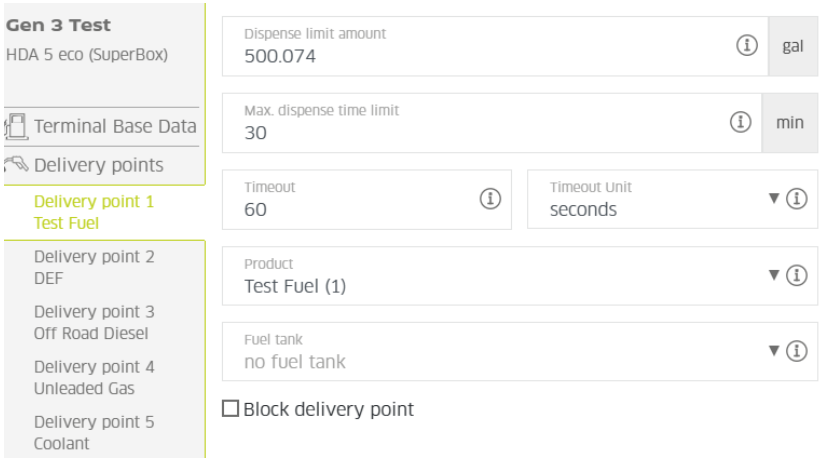

Figure 2 Delivery Point Settings

Setting Up Contingents

1. Navigate to Inventory Data -> Vehicles. If adding a new Vehicle, click Add New Vehicle. A tab for Contingents appears at the top of the window that opens. If editing an existing vehicle, check the box next to the vehicle(s) you want to add/edit contingents for, then select Change Contingents.

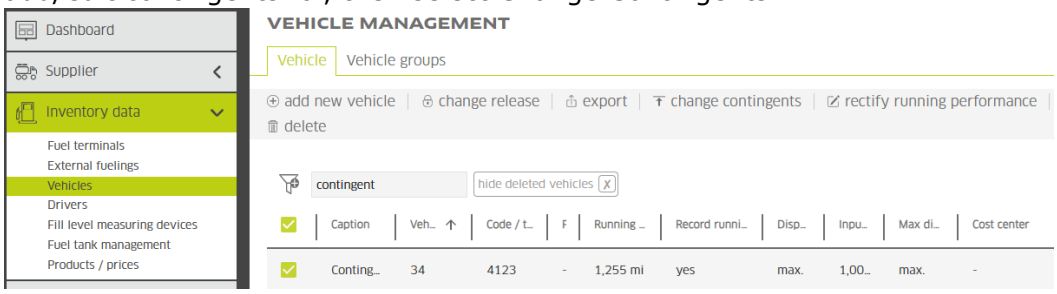

Figure 3 Vehicle Selection

2. In the Change/Edit window (Figure 4), all currently set contingents for that vehicle are shown. Any products with no contingent set will appear with a '-' for the Dispense Amount Limit and Time Interval Limit.

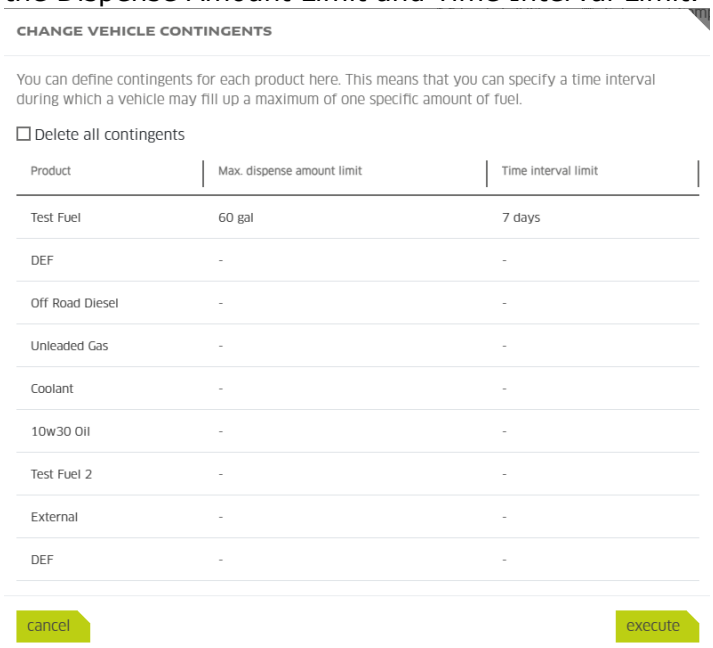

Figure 4 Contingent Edit Window

3. Hover over a Product and click to Edit. In the window that opens, set the desired dispense limit and time interval limit. To lock a vehicle from a product, set the

dispense limit to 0 gal and time interval limit to 1 days. Click Save when done.

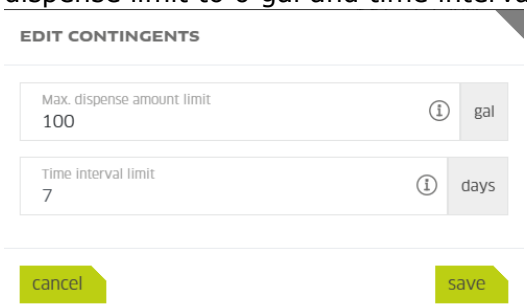

Figure 5 Product Contingent Entry

4. Repeat step 3 as needed for different products. Once finished, click Execute to save your changes.

Notes/FAQ:

- Contingents will transfer to all fuel terminals at your set intervals. For most customers, this is at the top of every hour.
- Contingents cannot be manually overridden at the fuel terminal and must be edited in the MyTecalemit Cloud system.
- Contingents/limits are shared between all dispense points and fuel terminals of that product type. For example, if you have 2 fuel terminals for DEF, the contingent will deduct based on usage from both terminals.
- Contingents can be deleted from a vehicle at any time by checking Delete all contingents in the Edit/Change Contingents window. Click Execute to save this change.