

GO WITH THE FLOW.



QUICK GUIDE


SUPERBOX

IMPORTING AND EXPORTING VIA USB DRIVE



EXPORTING FROM HD MANAGER TO USB FOR SUPERBOX:

- Open your HD Manager 8 software.
- Click on the Master Data tab.
- Click Export in the green bar.
- Select the Fuel Terminal you want to export to from the drop-down.
- Select "HDA-5 eco/HDA pro".
- Click Export.
- When File Explorer opens, select the USB drive from the left side of the window.
- Save the "DATAIN" file directly to the USB drive. The file should be outside of any folders on the drive.
- Verify the file saved successfully. Close the Export window when finished.

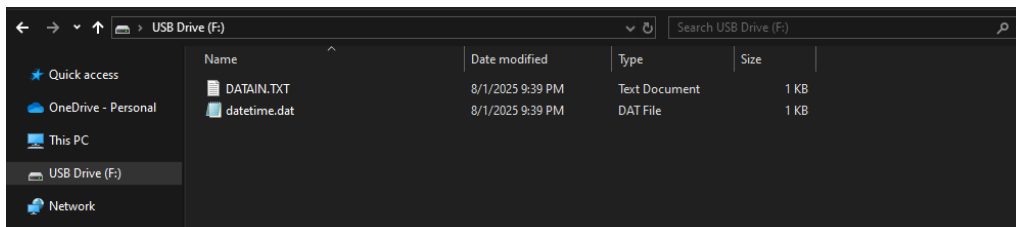

IMPORTING SETTINGS, DRIVERS, VEHICLES TO SUPERBOX:

Please note: Exporting from HD Manager to USB must be done prior to importing to the Superbox.

- Remove your USB stick from your PC.
- Take the USB stick out to the Superbox but do NOT plug it in until prompted by the system.
- Press Exit, then press the blank gray key under the USB icon on the screen.
- The screen will show "USB Code". Key 99999 (number 9 five times), then press Enter.
- Use the down arrow to select "Import Data" and press Enter.
- Insert the USB drive when prompted by the Superbox.
- Wait for the Superbox to process data. When finished, system will beep 3 times and return to Menu USB.
- Unplug the USB drive once system returns to Menu USB.
- Press "Exit", then press the gray key under the nozzle icon on the screen to exit the menu.

GETTING TRANSACTIONS FROM SUPERBOX

- Take your USB stick out to the Superbox. Do not insert the USB yet.
- Press Exit, then press the blank gray key under the USB icon on the screen.
- The screen will show "USB Code". Key 99999 (number 9 five times), then Enter.
- Use the down arrow to select "Export Data" and press Enter.
- Insert the USB drive when prompted by the Superbox. The USB port is on the left side of the Superbox.
- Wait for the Superbox to download data. When finished, system will beep 3 times and return to Menu USB.
- You can now remove the USB stick.
- Press "Exit", then press the gray key under the nozzle icon on the screen to exit the menu.

BRINGING TRANSACTIONS INTO HD MANAGER FROM USB SUPERBOX

- Plug the USB stick into your PC.
- Open your HD Manager 8 software.
- Click on the Data Import tab.
- Click on Data Import in the green bar.
- Click on the Import Data tab in the Data Import Window.
- Click Select File at the left side.
- File Explorer will open. Select the USB Flash Drive on the left hand side. Select the file DATA#### dated the same day you inserted the stick into the Superbox (Example DATA0001).
 - Each time you download from the Superbox it automatically pulls the transactions from the last time transactions were downloaded. This creates a new DATA#### file each time. The first download to the USB will be DATA0001, the second time DATA0002, and so on.
 - If you delete all files on the USB the count will begin again at DATA0001.
 - You may also see a DATAOUT file on the USB, you do not need this file unless fully restoring your software.
- Select the Fuel Terminal the transactions are for in the drop down box, then click the Import Data button. When the import finishes, the total number of Imported transactions will be displayed about the Import Data button.
 - HD Manager recognizes when transactions already exist so if a file is accidentally imported more than once it will not duplicate the transactions.